



Star Inflatables Instructions

DEFLATION INSTRUCTIONS

1. Begin by deflating all the body chambers evenly. By going around the boat and releasing one-third of the air from each chamber at the time, you are protecting the bulkheads in the main chambers of your boat. The easiest way to do this is by pressing the center stem of the valve in, but not turning it.
2. After one-third of the air is out of each chamber in the main tubes of your boat, you can then lock the valve in the open position to complete deflation.

Star Inflatables
232 Banks Road
Travelers Rest SC 29690
Toll Free: 877-900-2628
Or 864-836-2800